



Removing the **back cover**
Removing the **back cover**



Tools:
Fastener: -

2

Removing the **battery**
Removing the **battery**



Tools:
Fastener: -

3a

Removing the cover
-> **Buttons**
Removing the cover ->
buttons



Tools: *basic tools*
Opening Tool /Sesam(IFIXIT)
Fastener: *Cover must also be replaced*

3

3

Removing the display modules
Removing the screen




Tools: *Special tools Opening tool/Jimmy (IFIXIT)
Hot plate or iOpener (IFIXIT)*

Fastener:

4b

4a

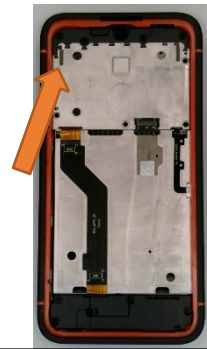

Removing the **rear camera**
Removing the **rear-facing camera**

Tools:
basic tools (tweezers)
Fastener: -


5a

Removing the **front camera**
Removing the **front-facing camera**

Tools: *basic tools (tweezers)*
Fastener: Reusable
reusable

Removing the mainboard
Removing the mainboard

Tools: Basic tools
Tweezers
Fastener: -

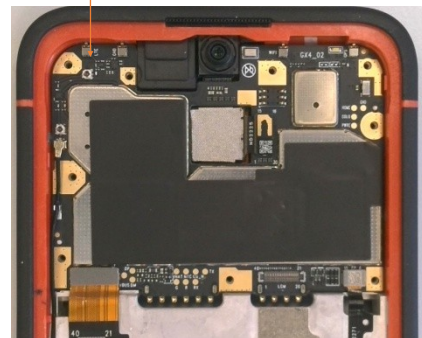

↓
4b

Removing the speaker box / lower cover

Tools: basic
Tweezers; Phillips screwdriver PH0

Fastening elements / fastener: -

↓
5b

Removing the sub-PCB with **microphone and charging port**

Removing the sub pcb with **microphone and charging port**

Tools: basic
Tweezers; Phillips screwdriver PH0

Fastener: -